


# D-Link® Technical Support Setup Procedure

## How to change PoE settings

1. Login to switch

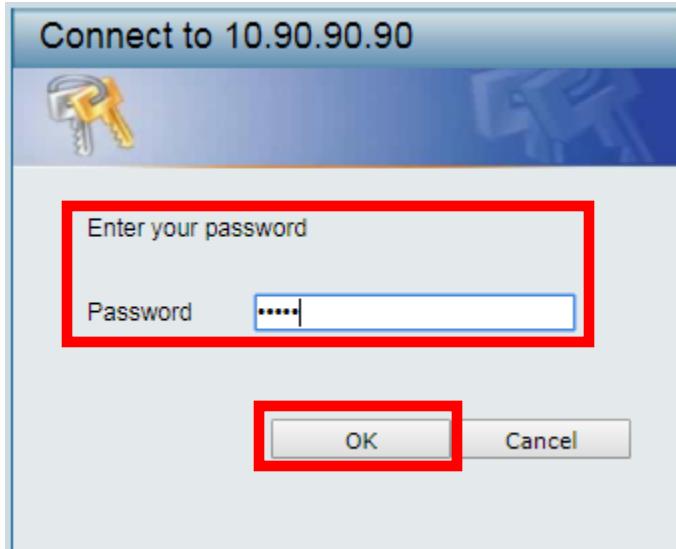

2. PoE > PoE port settings



3. Adjust port poe settings

From Port	To Port	State	Priority	Power Limit	User Define
01	08	Enabled	Normal	Auto	<input type="checkbox"/> W (1.0~15.4)
<input type="button" value="Apply"/> <input type="button" value="Refresh"/>					
Port	State	Priority	Power Limit	Power(W)	Voltage(V)
01	Enabled	Normal	Auto	0.0	0.0
02	Enabled	Normal	Auto	0.0	0.0
03	Enabled	Normal	Auto	0.0	0.0
04	Enabled	Normal	Auto	0.0	0.0
05	Enabled	Normal	Auto	0.0	0.0
06	Enabled	Normal	Auto	0.0	0.0
07	Enabled	Normal	Auto	0.0	0.0
08	Enabled	Normal	Auto	0.0	0.0

Note: Max power used by PSE: Class 0: 15.4W, Class 1: 4.0W, Class 2: 7.0W, Class 3: 15.4W

4. Save configuration

