

STEP 1



Connect Your PC (Laptop) to the Router (Port 1) using Network cable.

STEP 2

Admin Password:

Log In

Launch your browser (Google Chrome) and key in 192.168.0.1 in the address column and press Enter. Enter Username: Admin , Password : "Blank"> Login

STEP 3

Home | Setting

Internet Disconnected

Click on any item in the diagram for more information.

Wizard
Internet
Wireless

Configure Your Internet Connection

Please select your Internet connection type below:

☐ DHCP Connection (Dynamic IP Address)
Choose this option if your Internet connection automatically provides you with an IP Address. Most Cable Modems use this type of connection.

☒ Username/Password Connection (PPPoE)
Choose this option if your Internet connection requires a username and password to get online. Most DSL modems use this type of connection.

☐ Static IP Address Connection
Choose this option if your Internet Service Provider provided you with IP Address information that has to be manually configured.

Back Next

Choose Setting> Wizard. Select PPPoE, key in PPP Username and Password & setup WIFI SSID and Password

STEP 4

Home | Setting

Internet Disconnected

Click on any item in the diagram for more information.

Wizard
Internet
Wireless

Connected Client : 1

Click to repair

For VLAN Setting, Choose Setting > Internet

STEP 5

Triple-Play

Status: ☒ Enabled

Priority ID: ☐ Disabled

Internet VLAN ID: 500

IPTV VLAN ID: 600

VOIP VLAN ID: 400

Interface Traffic Type Setting

LAN Port 1: Internet

LAN Port 2: Internet

LAN Port 3: Internet

LAN Port 4: IPTV

Wireless: Internet

Wireless Guest Zone: Internet

Internet setting pages, choose VLAN setting and enable it at Triple-Play .

For UNIFI VLAN
Internet :500
IPTV: 600
VOIP:400

For Maxis VLAN
Internet :621

Remark: At LAN Port 4, select IPTV if you have subscribe UNIFI TV.