How to Setup DSL-2877AL TM Unifi and IPTV Setup?

Step 1 Connect Your PC (Laptop) to the Router (Port 1,2,3,4 either one of them) using Network cable.

Step 2 Launch your browser (Google Chrome) and key in 192.168.1.1 in the address column and press Enter




Step 3 Enter your Username: admin and Password: admin. Click on Log In



Step 4 You will see a D-Link configuration page, click on **Setup > Internet Setup > Internet Connection Type** and choose **Ethernet WAN (NBN/UFB).**

Step 5 Choose the Country > Malaysia and ISP > TM Unifi PPPOE

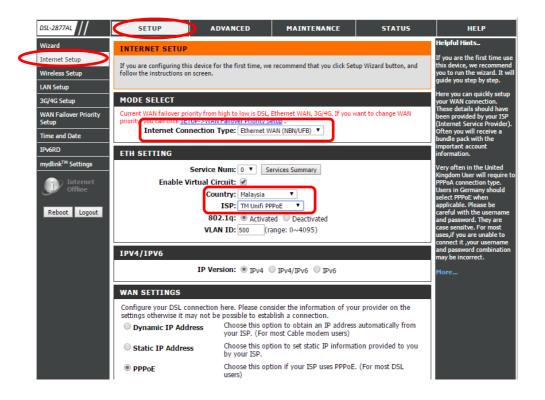


Step 6

IPV4/IPV6: IP Version > IPv4

WAN Settings: PPPOE


Username: Username provided by your ISP Password: Password provided by your ISP

Step 7 Click > Apply. Plug in the cable into the DSL-2877AL WAN Port

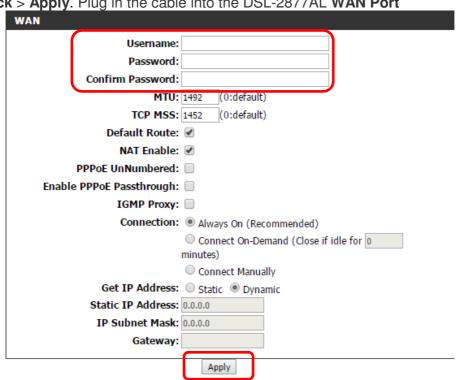

TM IPTV Setup


Step 1 Click on LAN Setup, at LAN Group > choose Group 4 > Tick Port 4

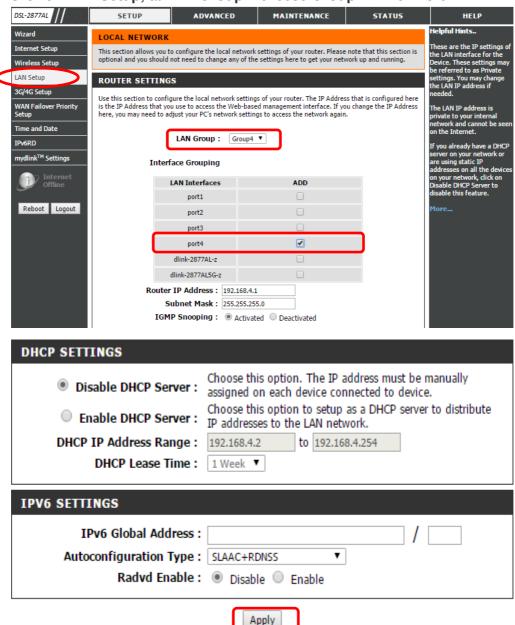

Step 2 Click > Apply

Step 3 Click on Internet Setup > Internet Connection Type and choose Ethernet WAN (NBN/UFB).

Step 4 Choose the Service Num > 1, Enable Virtual Circuit > Tick, Country > Malaysia and ISP > TM Unifi IPTV

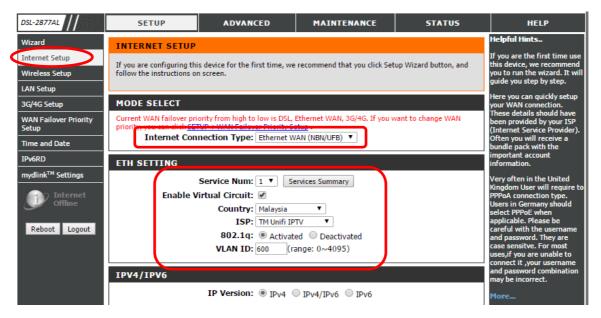

Step 5

IPV4/IPV6: **IP Version** > **IPv4** WAN Settings: **Bridge Mode**

Bridge Group > **Tick** LAN Group > **Group 4**

Step 6 Click > Apply. Plug in the IPTV LAN Cable into the DSL-2877AL LAN Port

WAN SETTINGS	
Configure your DSL connection here. Please consider the information of your provider on the settings otherwise it may not be possible to establish a connection.	
Opnamic IP Address	Choose this option to obtain an IP address automatically from your ISP. (For most Cable modem users)
Static IP Address	Choose this option to set static IP information provided to you by your ISP.
РРРоЕ	Choose this option if your ISP uses PPPoE. (For most DSL users)
Bridge Mode	Choose this option if your ISP uses Bridge.
WAN	
WAN	
Bridge Group: Lan Group : Group4 ▼	
Apply	