D-Link[®] Technical Support Setup Procedure

How to access switch interface

1. Access control panel



2. Network and sharing center





3. Change adapter settings

Control Panel Home	View your basic network information and set up connections	
Manage wireless networks Change adapter settings Change advanced sharing	DELL guest 2.4 (This computer)	2 Internet See full map
settings	View your active networks Image: Set up a new connection or network Set up a new connection or network Set up a new connection or network Set up a wireless, broadband, dial-up, ad here Set up a network Connect to a network Connect or reconnect to a wireless, wired, or Choose homegroup and sharing options Access files and printers located on other no Image: Troubleshoot problems Diagnose and repair network problems, or printers	Connect or disconnect Access type: Internet Connections: I LAN bc, or VPN connection; or set up a router or access point. dial-up, or VPN network connection. etwork computers, or change sharing settings.

4. LAN (Local Area Network)





5. Access ipv4 settings

LAN Properties			
Networking Sharing			
Connect using:			
Realtek PCIe GBE Family Controller			
Configure			
This connection uses the following items:			
Client for Microsoft Networks VMware Bridge Protocol ANOD Network Security Filter driver QoS Packet Scheduler File and Printer Sharing for Microsoft Networks A Internet Protocol Version 6 (TCP/IPv4)			
4			
Install Uninstall Properties			
Description Transmission Control Protocol/Internet Protocol. The default wide area network protocol that provides communication across diverse interconnected networks.			
OK Cancel			

D-Link Technical Support Setup Procedure

6. Change ip address to be 10.90.90.xx and press ok

Internet Protocol Version 4 (TCP/IPv4) Properties			
General			
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.			
Obtain an IP address automatically			
Use the following IP address:			
IP address:	10 . 90 . 90 . 8		
Subnet mask:	255 . 255 . 255 . 0		
Default gateway:	•••		
Obtain DNS server address automatically			
Use the following DNS server addresses:			
Preferred DNS server:	1 . 1 . 1 . 1		
Alternate DNS server:	• • •		
Validate settings upon exit	Advanced		
	OK Cancel		



7. Access 10.90.90.90 via browser, default password is admin

